 


140 mm

210 mm

ACLU[™]M

INSTRUCTION MANUAL FOR AUTO SPINNING
ELECTRIC TUMBLER WITH TEASER
TT-01

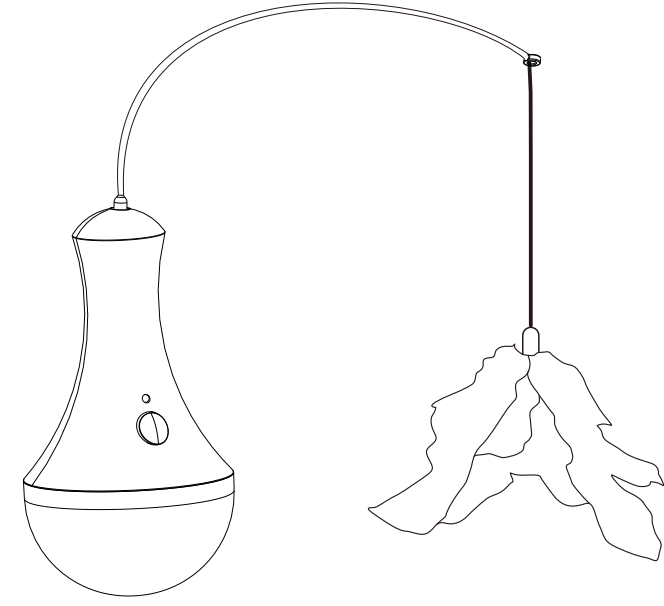

Cautions

1. The device is not waterproof and should only be used in dry environments.

2. Ensure the use of correct batteries (3x AA). Do not use rechargeable batteries.

3. Mixing old and new batteries or different types of batteries is not recommended.

4. Install batteries observing proper polarity and do not mix old and new batteries.

5. Remove depleted batteries promptly from the device.

6. If not in use for an extended period, remove batteries to prevent potential damage.

7. Improper battery installation may cause an explosion hazard.

8. Avoid excessive play; prolonged movement may be strenuous for your pet.

9. If the tumbler's movement slows or stops after continuous play or if the LED dims, this indicates low battery power. Replace the batteries at this time.

10. This product is designed exclusively for pets; it is not a child's toy. Children should only use the product under adult supervision.

11. In the event of any visible damage or if the product deforms, discontinue use immediately.

12. Prevent any small parts from being ingested by pets or children.

13. Do not attempt to repair the device yourself if it's found to be faulty; also, do not dismantle it. Properly dispose of the product to avoid environmental harm.

14. Do not dispose of batteries in a fire to avoid the risk of an explosion.

Features



1. 360-degree rotation for dynamic and unpredictable movements, providing endless fun for your pet.

2. Constructed with high-quality, durable materials for longevity and safety.

3. The device's unpredictable movement patterns simulate the thrill of the hunt, keeping your cat engaged and active.

 
4. Designed for easy setup and use - get your pet playing in minutes!

5. Automatically turns off after 15 minutes to prevent over-exertion and to conserve battery life...



Front


Structure

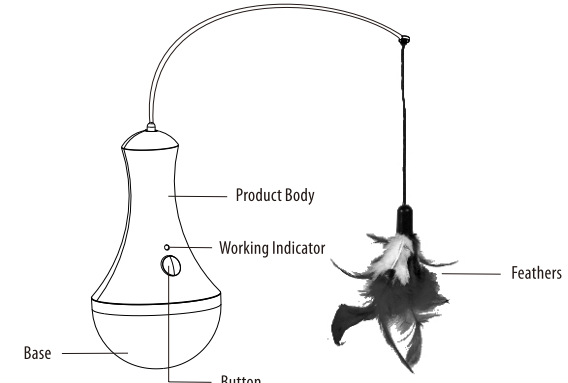

Instructions

1. Turn the tumbler base anticlockwise to detach the base from the body.

 2. Install 3pcs of AA battery.

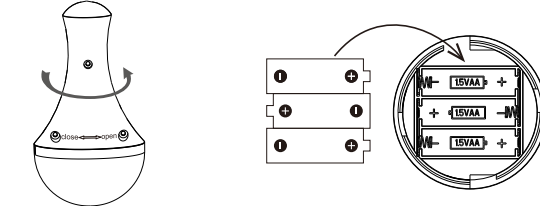


3. Install the base back to the body.

4. Fix the wand to the pin on the top of the tumbler.

5. Press the on/off button. The indicator will be turned on. Start the play.

6. The tumbler will stop working after 15 minutes.



Technical Specifications

Product	Model	Charging Voltage	Material	Battery	Teaser pole length	Dimensions
Auto Spinning Electric Tumbler with Teaser	TT-01	DC5V/1A	ABS	3xAA	170mm	ø80*150mm

Warranty Card

Product/Serial Number:

Shop Location:

Shop Address:

Date of Purchase:

Shop Stamp:

Purchaser Signature:

This product is warranted against manufacturing and material defects for a period of one (1) year from the date of purchase. To claim under this warranty, please retain your original dated receipt or invoice as proof of purchase and return the defective item to the place of purchase. It's important to note that this warranty does not cover damage resulting from accidents, misuse, or abuse. Additionally, the warranty specifically excludes any incidental or consequential damages, including but not limited to, loss of pets or other livestock due to any defect or failure of this product. We value your trust and are committed to ensuring your satisfaction with our products.

Back