 




User Manual



Keylite 500

USB-C Keychain Light

FEATURES

POWERFUL BEYOND ITS SIZE

- As small as your finger, measuring 2.38 in x 0.63 in and weighing only 19g (0.67oz).
- Reaches up to 500 lumens with a distance of 70 meters.

CONVENIENT CHARGING

- USB-C recharging, back to full power in about 1 hour, providing up to 12 hours of use (Moonlight mode)
- Monitor your power levels with a battery indicator.







DURABLE CONSTRUCTION

- IP66 rated for dust-tight protection and resistance against powerful water jets.
- Can withstand drops from up to 1.5 meters, ensuring reliability in tough environments.

IN THE BOX

1xKeylite 500 Flashlight; 1xUSB-C Cable; 1xKeychain; 1xUser Manual

TECHNICAL PARAMETER

FL1 STANDARD	Turbo	High	Med	Low	Moonlight	Strobe	
	500~260 ~50lumens	200~150 ~20lumens	60~20 lumens	10 lumens	1 lumen	500 lumens	
	20s+5min +35min	3min+15min +42min	25min +80min	4h	12h	70min	
	70m		1225cd		IP66		1.5m

Notice: The above-mentioned parameters have been measured in accordance with the international flashlight testing standard ANSI/PLATO FL1, and are approximate and may vary from flashlights, batteries, and environments.

OPERATING INSTRUCTION

Lock/Unlock

Lock: While off, press and hold the switch for 3 seconds; the indicator will flash alternately, locking the flashlight. Once locked, pressing the switch will cause the indicator to flash 3 times to indicate that it is locked.

Unlock: In the locked state, double press the switch to unlock and enter memory mode.

Cycling Mode

While off, single press the switch to activate memory mode (defaulting to the previous brightness level used). Long press the switch for 0.7 seconds to decrease brightness, cycling through High, Med, and Low.

Moonlight Mode: While off, long press for 1 second to enter moonlight mode. Long press the switch for 0.7 seconds to enter cycling mode.

Turbo Mode: Double press the switch to enter Turbo mode. Long press the switch for 0.7 seconds to decrease brightness, entering cycling mode. A single press will turn it off.

Strobe Mode: Triple press the switch to enter strobe mode. A single press will turn it off.

BATTERY INDICATOR

Green light stays on for 3s: >30%

Red light stays on for 3s: 30%~10%

Red light flashes: <10%

WARNING

1. By using this device, you certify you have read the included User Manual and Warning Card and release the manufacturer and retailers from all liabilities.
2. Please use in accordance with applicable laws and regulations.
3. Keep out of reach of children.
4. DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
5. DO NOT cover the light head when the flashlight is on, or place the flashlight head on the ground. The radiation energy of the flashlight may cause damage to the flashlight itself, or even result in burning to other materials.
6. DO NOT modify/disassemble the light, otherwise the user will be in charge of the all responsibility.
7. When the flashlight is working on the high mode, the surface temperature can reach 50°C. Please switch off the flashlight temporarily or turn it to low mode.
8. Please use turbo mode with caution. Turbo greatly reduces the runtime and leads to high temperature on the flashlight surface.
9. DO NOT use the turbo mode continuously when the environmental temperature is high in case the flashlight body is too hot to hold.
10. When the product is used in a low-temperature environment, please try and keep it warm. If the temperature is too cold, it may not reach the highest output.
11. If the product is left unused or carrier and transported, please lock the button to avoid accidentally activating the flashlight.
12. Please keep the front lens clean. Due to radiation energy, it may heat up foreign matter on the lens which can potentially cause damage.
13. Quality batteries with circuit protection will reduce the potential risk.

USAGE AND MAINTENANCE

Unauthorized disassembly may damage the light and void the warranty.

PRODUCT WARRANTY

1. If the customer experiences any problems with an Acebeam product within 15 days of purchase, the dealer will replace that product.
2. ACEBEAM products with a built-in, non-removable battery are covered for 2 years warranty from the date of purchase. If any quality issues arise during normal use, customers can receive free repair service.
3. The warranty for the built-in battery is 2 years, and accessories are not covered under the warranty.
4. The warranty does not cover damage or failure caused by:
 - A. Rough usage or operation which does not comply with the user manual or product specifications.
 - B. Unauthorized disassembly, repair or modification. Defects or damaged caused by factors out of Acebeam's control.
 - C. Battery leakage damaged products.
5. If there are any questions about ACEBEAM products, please consider the warranty and contact Acebeam or your original Acebeam dealer for warranty return instructions. Email: info@acebeam.com

Acebeam is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.



ACEBEAM TECHNOLOGY CO., LTD

+86-0755-23036551 | www.acebeam.com | info@acebeam.com

3/F, No.2 Building, Yijiang Industrial Park, Dalang, Longhua, Shenzhen 518100, Guangdong, China

Copyright © ACEBEAM. All rights reserved.

Powered by Acebeam Technology Co., Ltd