







SIFTING & SIFTING & SCREENING

Dinnissen Process Technology has been designing, building and testing a complete range of innovative sifting solutions for decades.

From centrifugal, drum and vibrating sifters to complete processing lines, our sifting & screening solutions are designed to sieve powders, grains and granules quickly and reliably with exactly the desired end result. Dinnissen sifting solutions are trusted by the world's top producers in the feed, food, pet food and chemical sectors.







Centrifugal Sifters

- classification
- screening
- separation



Rotating Drum Sifters

screening

separation



Vibrating Sifters

- screening
- separation




System Integration


- Complete processing lines
- Optimalization of product intake and outflow
- Integration in your current processing line

CENTRIFUGAL SIFTERS 😰 💙 📲 🕇 🗞 💥 🚎 💼

The Centrifugal Sifter is ideal for processing various amounts of product. Product is fed via an inlet system into the top of the machine, where rotating blades bring the product in motion. Thanks to the centrifugal forces, the product is distributed evenly over the entire sifter screen area, while the larger (unwanted) particles are effectively diverted to a separate outlet of the machine.

Dinnissen Centrifugul Sifters can be fitted with an extractable screen holder. This enables the screen holder to be taken out of the sifting chamber entirely, which makes it easier to inspect and clean the screen and inside of the machine.

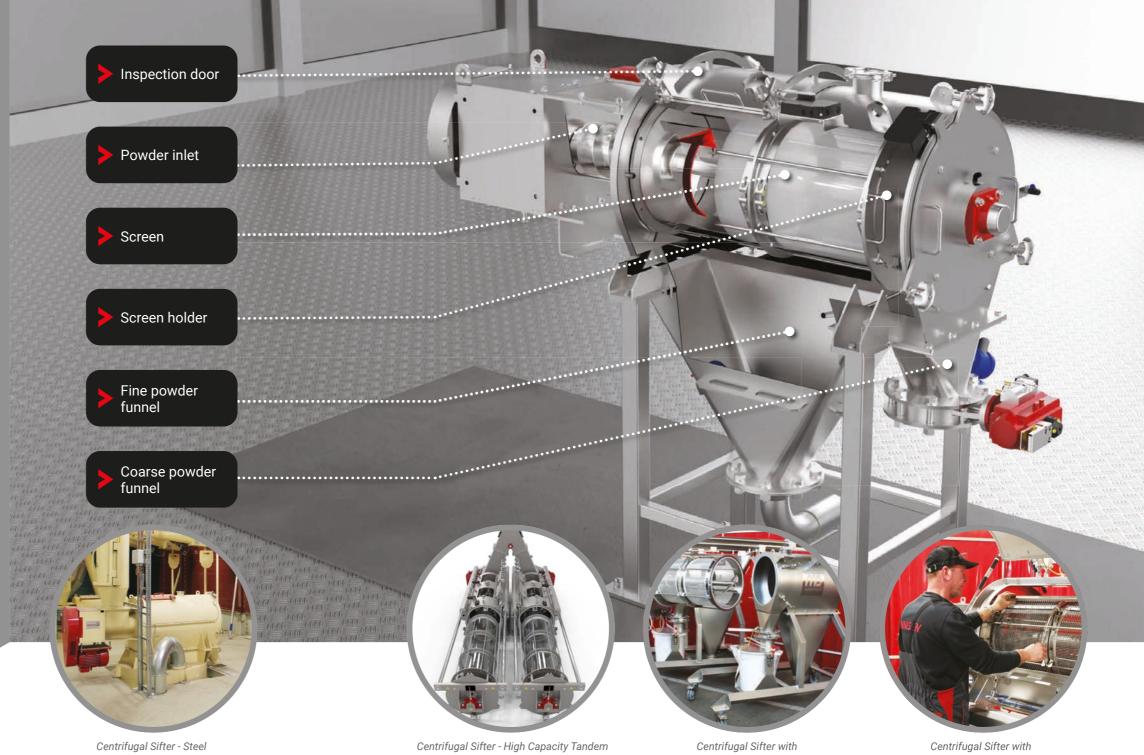

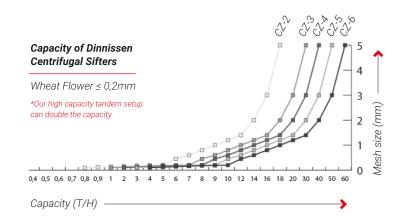


Features and options

- Material: steel / stainless steel
- Atex version available
- Inline pneumatic conveying
- Wingdoors
- Wide range of screens available
- · Hygienic design & easy-to-clean
- · Screen Inspection System for less downtime
- · Customized design is possible
- Dinnissen System Integration

Screen Inspection System


Centrifugal Sifter						
Туре	Screen Area (m2)	A (mm)	B (mm)	C (mm)		
cz-2	0,68	1706,5	730	660		
cz-3	0,79	1856,5	730	660		
cz-4	1,05	2100,5	730	660		
cz-5	1,38	2270	900	700		
сz-б	2,20	2810	900	700		



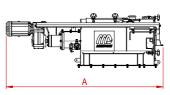

Easy Access Wingdoors

Centrifugal Sifter - Screen Inspection System							
Туре	Screen Area (m2)	A (mm)	B (mm)	C (mm)			
cz-2 mg	0,68	2714	730	660			
cz-3 mg	0,79	3014	730	660			
cz-4 mg	1,05	3458	730	660			
cz-5 mg	1,38	3725	900	700			
cz-6 mg	2,20	4690	900	700			

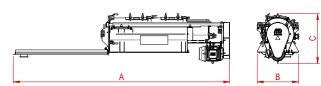

ROTATING DRUM AND VIBRATING SIFTERS 😰 💙 📲 🕇 🌀 💢 🕮 💼

Vibrating Sifters can be used as a control sifter to filter out contaminants. It helps producers at critical control points (CCPs) within the production process. CCPs are essential to verify that food safety is being maintained. Dinnissen Vibrating Sifters ensure that contaminants do not get a chance to be processed into the final product and removes dust in the product flow.

Rotating Drum Sifters can be used for sifting grains and chunks. Its relatively low RPM of less than 1 meter per second prevents product damage and ensures compliance with the applicable ATEX guidelines.



for pneumatic conveying

Vibrating Sifter

A vibrating sifter is equipped with an off-center motor that creates a vibratory motion. Once material is fed onto the screen at the top or center of the device, vibrating action causes the material to spread out and move across the screen surface. Smaller particles fall through the screen apertures or mesh holes, while larger particles remain on top. The vibratory action can help to break up agglomerations and promote the passage of particles through the screen. Separated materials are collected from different discharge points. For multi-deck vibrating sifters, each deck will have its own discharge point for the respective size fraction.

magnet and sampling system

Rotary Drum Sifter

Rotating Drum Sifter

A rotating drum sifter consists of a perforated cylindrical drum that is normally elevated at an angle at the feed end, which helps the material flow through it. Material is fed into the drum, which rotates around its axis. The speed of rotation can be adjusted according to the desired level of separation. As the drum rotates, the material inside tumbles and rolls. The perforations or screens allow smaller particles to pass through the holes of the drum while larger particles are retained inside. The size of these perforations can be varied to achieve the desired size separation, drums can even have multiple perforation sizes. The finer materials that fall through the screen are collected separately from the larger particles that are discharged at the end of the drum.

SYSTEM INTEGRATOR WITH MANUFACTURING SKILLS



Extra-Large Rotary Drum Sifter


The right type of sifter

Contact our experts to determine what the right type of sifter is for your specific application. Over 75 years of experience with sifting and screening in many different markets enable us to handle even the most difficult sifting challenges. Whether you need a single machine or a complete processing line, we are ready to design your perfect solution.

SIFTING & SCREENING



- \checkmark In-house engineering, production and installation
 - ✓ Extensive service and testing facilities
- EG 1935/2004, ATEX-, GMP-, CE-, HACCP- en EHEDG
 - ✓ ISO 9001, 14001, 27001 and 45001 certified
 - ✓ Over 75 years of experience

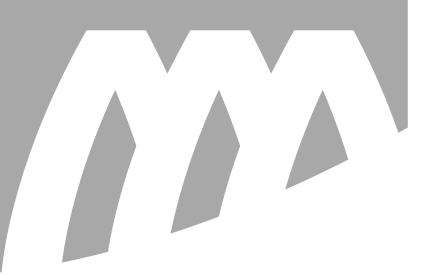

Dinnissen BV (headquarters)

Horsterweg 66 NL-5975 NB Sevenum T +31 77 467 35 55 F +31 77 467 37 85 E powtech@dinnissen.com W www.dinnissen.com

Dinnissen BV

Netwerk 1 NL-1446 XB Purmerend

- T +31 299 460 640
- F +31 299 675 335
- E powtech@dinnissen.com
- W www.dinnissen.com

Dinnissen Deutschland GmbH

Siemensstraße 31 D-47533 Kleve

- T +49 2821 971 154
- F +49 2821 971 168
- E powtech@dinnissen.de
- W www.dinnissen.de

Dinnissen Asia

Wisma GKBI 39th floor Jl. Jend. Sudirman No. 28 Jakarta, 12190

- T +62 21 5799 8035
- E powtech@dinnissenasia.com
- W www.dinnissen.com

Sifting & Screening | GB | 2024.









Disclaimer: the technical specifications stated in this brochure, including dimensions, weights and the like, are indicative. Consequently, no rights can be derived from the contents of this brochure.



TRUSTED BY THE BEST